

Addendum 1 to M-305(C) E4000 Software Manual

Menu Screen Flowcharts for Firmware Version EA.01.20.E




Route Menu





Route Menu - Delivery

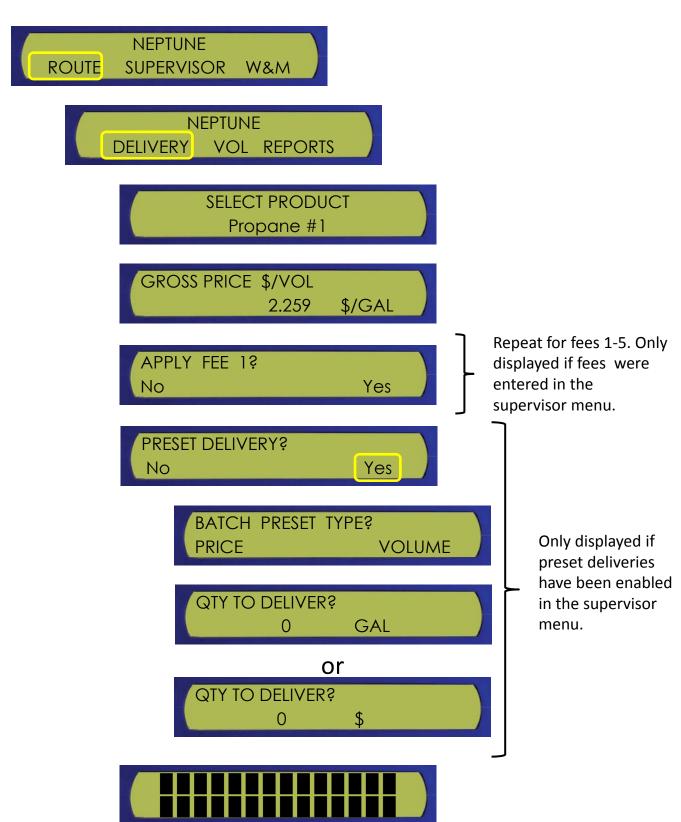

continued on next page




Route Menu – Delivery (continued)






Route Menu - Vol

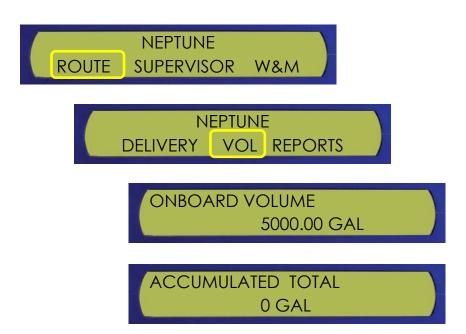



ROUTE Menu - Reports

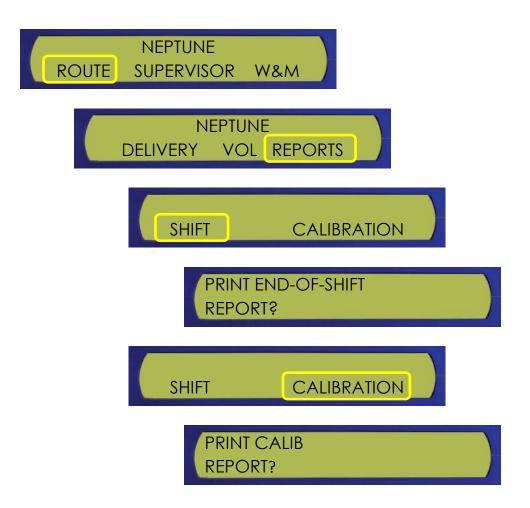




Supervisor Menu




Supervisor Menu - Password Entry

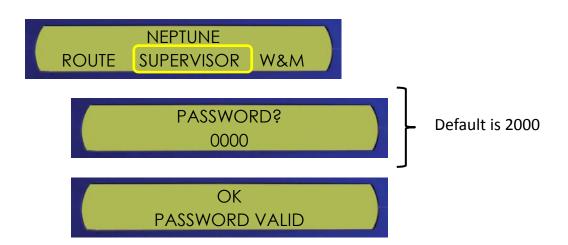




Supervisor Menu - Product Data - Price

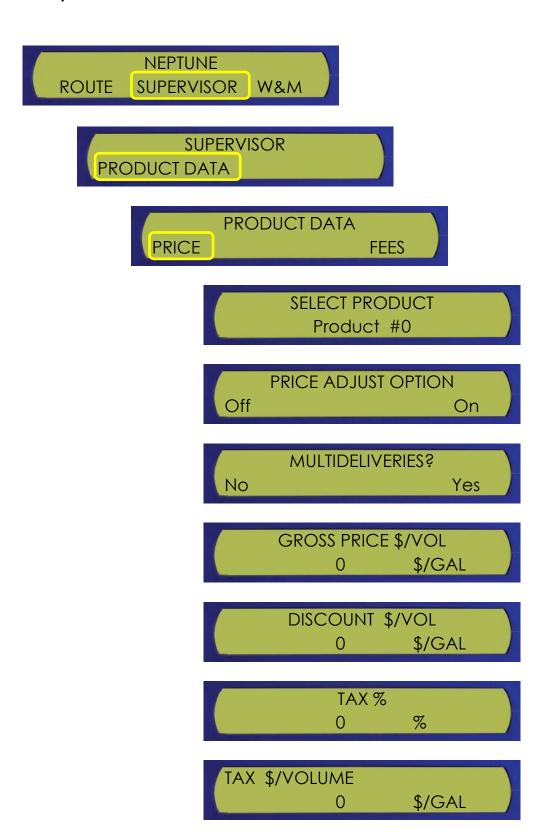




Supervisor Menu - Product Data - Fees

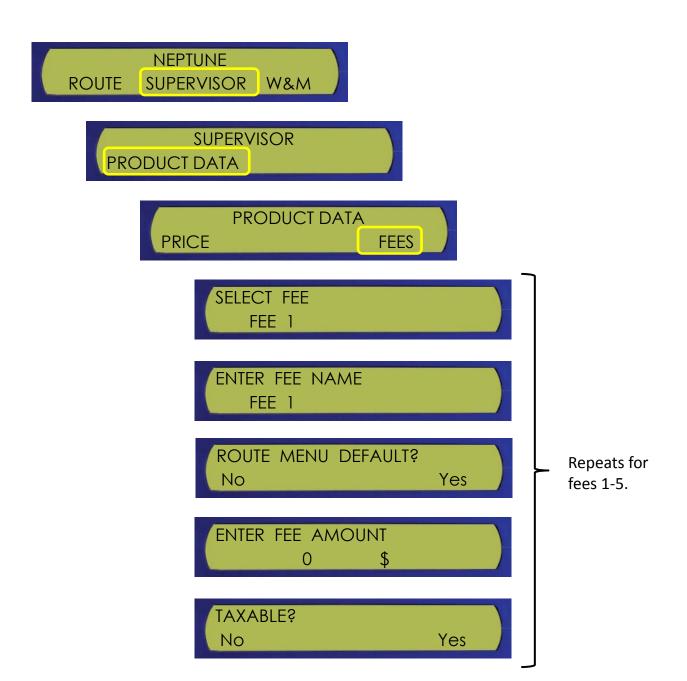




Supervisor Menu – Time/Date

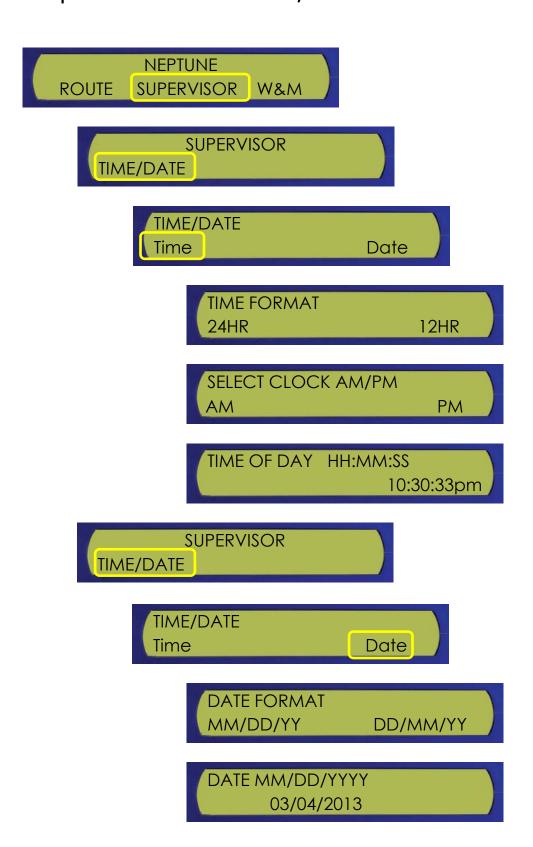




Supervisor Menu - Batch

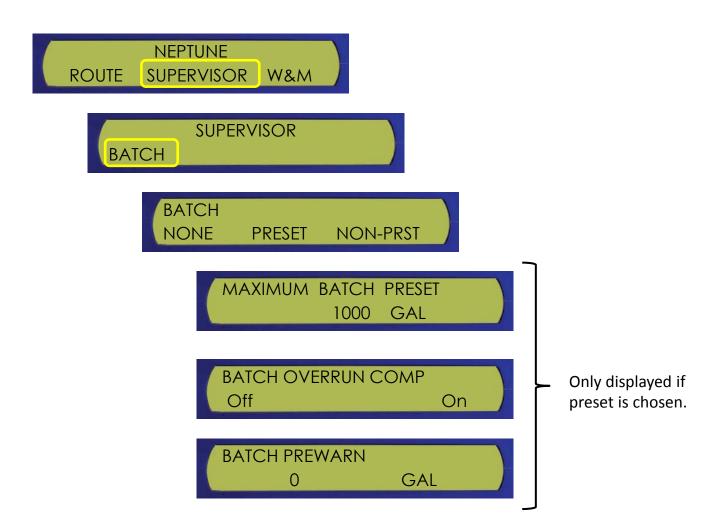




Supervisor Menu - Com Ports - Printer

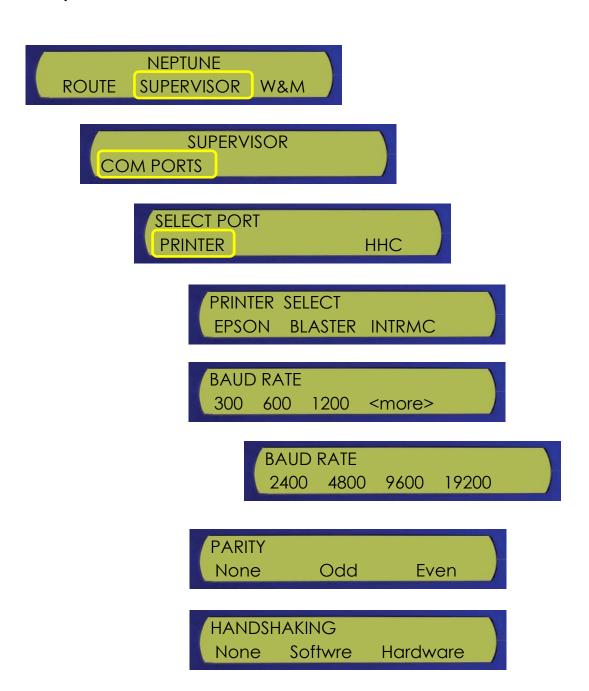




Supervisor Menu - Com Ports - HHC

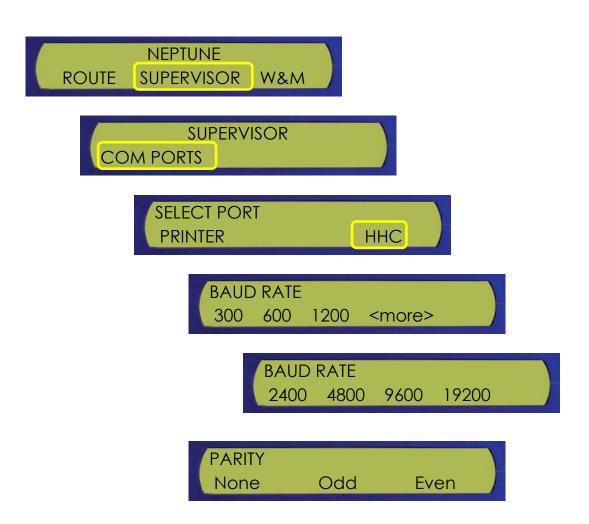




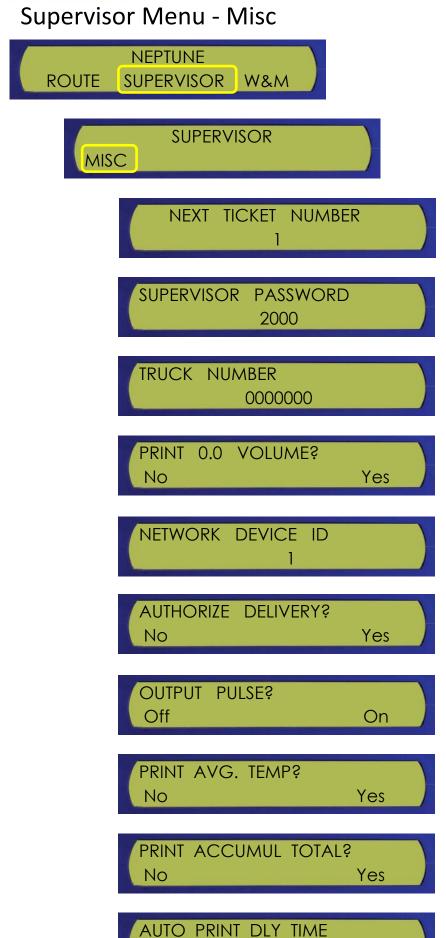

180sec



W&M Menus

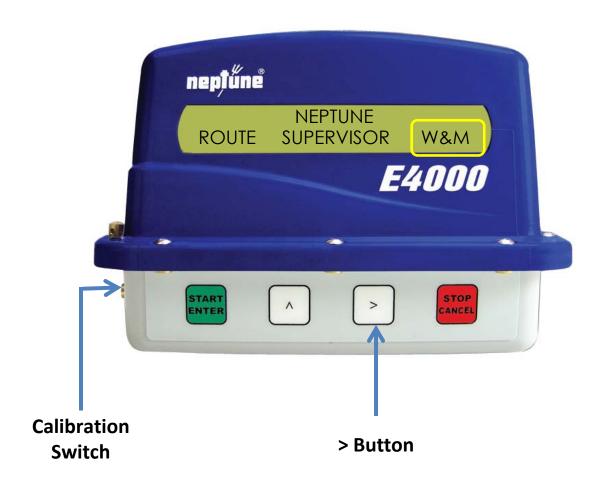


Starting from the root menu, remove the seal screw from the left side of the register and depress the internal calibration switch using a paper clip or small Allen key (3/32" is ideal).

Simultaneously press the [>] button to access the **W&M** mode. When **W&M** is flashing, press **START/ENTER** to continue.




Weights and Measures Menu - Volume

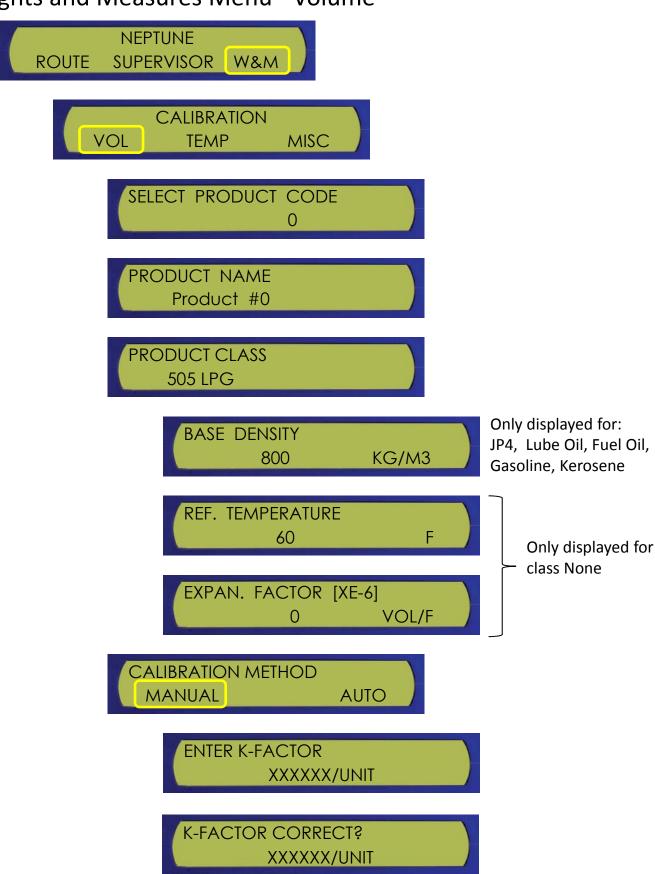

continued on next page




Weights and Measures Menu – Volume (continued)

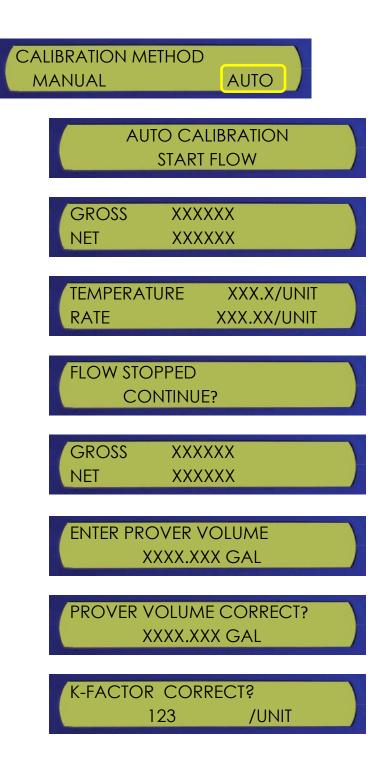




Weights and Measures Menu - Temp

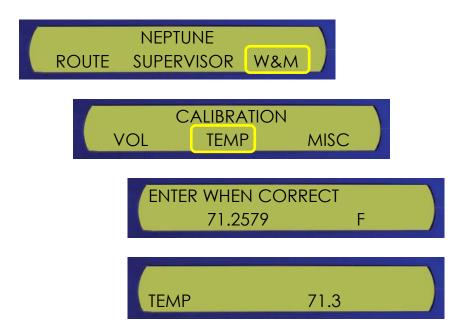



Weights and Measures Menu - Misc

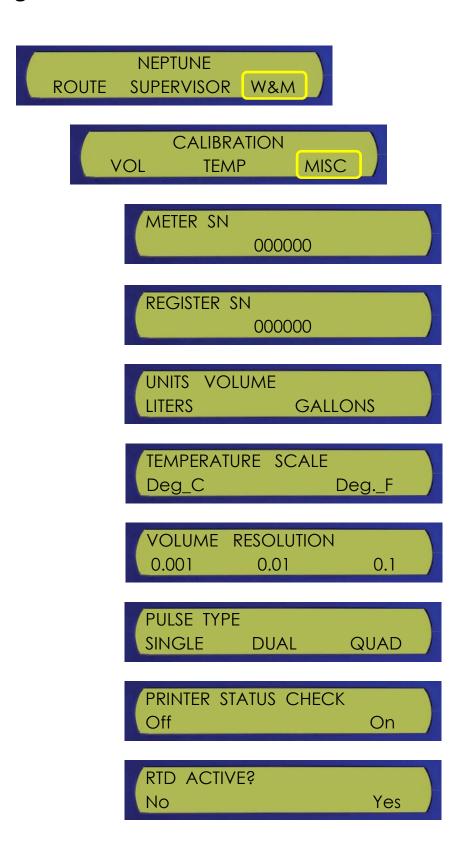



Weights and Measures Menu – Product Classes

PRODUCT CLASS 505 LPG PRODUCT CLASS 510 LPG PRODUCT CLASS Fuel Oil PRODUCT CLASS Lube Oil PRODUCT CLASS Gasoline PRODUCT CLASS Kerosene PRODUCT CLASS JP4 PRODUCT CLASS Exp.Fact PRODUCT CLASS None