 




Operators Guide for LPG, with security valve (“NON-PRESET” BATCH mode).

How to make a delivery

1. Insert ticket in the printer
2. From the “NEPTUNE” root menu, press either of the white buttons \triangleright or \wedge on the four button front control panel, until “ROUTE” is flashing. Then press the green START/ENTER button.



 
3. Press \triangleright or \wedge until “DELIVERY” is flashing, then press the START/ENTER button.



4. Press \triangleright or \wedge until the product that you intend to deliver is displaying in the “SELECT PRODUCT” menu, then press the START/ENTER button to confirm the correct product. For a priced product the display will show the gross price, confirm this is the correct price by pressing the START/ENTER button, or press STOP/CANCEL to return to the “SELECT PRODUCT” menu.



5. The display will reset and after 10 seconds the register will open the security valve.



6. You can now open the manual valve to begin delivering product.
7. When the delivery is complete close the manual valve.
8. Press the STOP/CANCEL button to close the security valve.

Note: pressing the START/ENTER button again will re-open the security valve to continue the delivery.


To print a delivery ticket for LPG, "NON-PRESET" BATCH mode

1. Insert the ticket in the printer.
2. When the delivery is completed press the red STOP/CANCEL button to close the security valve (if you didn't do it for the step 8).
3. Press the STOP/CANCEL button again to print the delivery ticket. If additional copies of the delivery ticket are required press the START/ENTER button once for each copy required (each copy will have "DUPLICATE" printed at the bottom).
4. After printing the ticket, press the STOP/CANCEL button to complete the delivery and return to the "SELECT PRODUCT" menu. To return to the NEPTUNE root menu press the STOP/CANCEL button 2 times.

Note: The delivery ticket will be printed automatically, three minutes after the delivery is completed, without pressing any buttons if "MULTIPLE DELIVERIES" is disabled.

To print a shift report

1. From the NEPTUNE root menu, press either \rangle or \wedge , on the four button front panel, until "ROUTE" is flashing, then press the START/ENTER button.

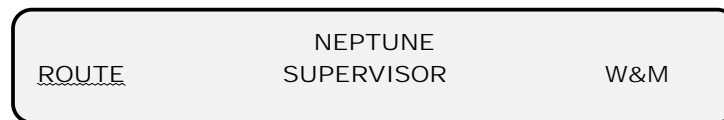

2. Press \rangle or \wedge until "REPORTS" is flashing, then press the START/ENTER button.



3. Press \rangle or \wedge until "SHIFT" is flashing, then press the START/ENTER button.



4. Press the START/ENTER button when the display reads "PRINT-END-OF SHIFT REPORT?"



5. The end of shift report will now print.